

Published by Hutchison 3G UK Limited. All rights in this publication are reserved and no part may be reproduced without the prior written permission of the publisher. © 2005 Hutchison 3G UK Limited.

A Hutchison Whampoa company.

Hutchison 3G UK Limited trading as 3 is a service provider and has provided the information in this user guide concerning what you might expect from 3 services. Sony Ericsson Mobile Communications AB is the manufacturer of the K608i handset and has provided the information on its features and use set out in this user guide.

The contents are believed to be correct at the time of going to press, but any information, products or services mentioned may be modified, supplemented or withdrawn. The provision of any products and services by Hutchison 3G UK Limited is subject to 3's customer terms (available at [three.co.uk](http://three.co.uk)). The customer terms will take precedence if there is any discrepancy with this publication.

'3' and related images, logos and names referred to in this publication are trademarks of the Hutchison Whampoa group of companies.

Designed by Dutton Merrifield Ltd, Bristol.  
This publication is printed on fully recyclable paper. DM05284 Jul05



Sony Ericsson

K608i

3 services user guide



Sony Ericsson

K608i



Discover.



Discover your Sony Ericsson K608i.

# Helpful information – My 3

## Manage your account and learn about 3 services direct from your mobile

- Press **Services** and select **Go to Services**. Scroll to **My 3** and press **My 3**. Through **My 3** you can keep track of your bill and credit details, whether Pay monthly or ThreePay. You can also learn more about 3's services through a selection of videos and tasters. All **My 3** services are free.

## Find out more about 3's services

- Visit **three.co.uk**
- For more information on **My 3** visit **three.co.uk/my3**
- Email **customer.services@3mail.com** or call customer services on 333 (0870 7330 333 from another phone).

## Useful numbers

	Mobile	Other phones
<b>3 customer services</b>	333	0870 7330 333
<b>Mail</b> (voicemail, email & faxmail)	123	07782 333 123
<b>Videomail</b>	123 (Press <b>123</b> )	
<b>ThreePay top-up</b>	444	0870 7330 444
<b>Directory enquires</b>	118 333	118 333
<b>International directory enquires</b>	118 313	118 313
<b>Disabled and elderly enquires</b>	195	
<b>Emergency calls</b>	999	999

## Getting the most from your battery

- You can recharge your battery several hundred times before it will need replacing. You don't need to fully discharge it before recharging.
- Don't expose the battery charger to direct sunlight or use in areas of high humidity such as a bathroom. Battery life will decrease if you expose it to temperatures below -10 °C or above 45 °C.
- If you charge your battery regularly and you notice a decrease in talk time or an increase in charging time, then it's probably time to buy a new battery.



Insert your SIM and battery

Start the discovery – Planet 3

Handy information about your mobile

Getting the most from your mobile

Calling and video calling

Using camera, video and audio

Setting up your email

Text, multimedia and email messaging

Transferring files between your mobile and PC

Health and safety information

 
Helpful information – My 3



# Insert your SIM and battery

Your 3 SIM may only be used in mobiles which are enabled for 3 services.

Any attempt to use the SIM in other mobiles may result in serious damage to the mobile and may prevent you from being able to use it, including the making of emergency calls. In these instances, we are not responsible for any such damage or usage problems.

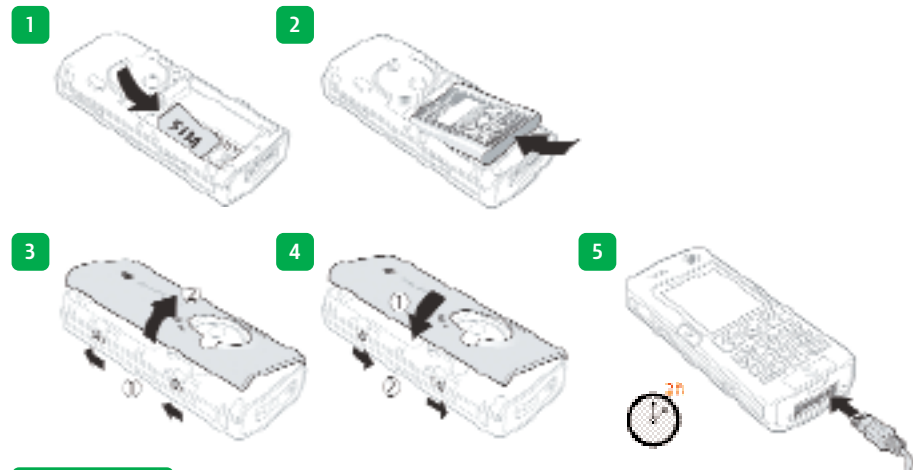

# Health and safety information

IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries / states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales/purchase contract.

\*EUROPEAN UNION (EU)

If you have purchased your Product in an EU country you can have your Product serviced, under the conditions set out above, within the warranty period in any EU country where an identical Product is sold by an authorised Sony Ericsson distributor. To find out if your Product is sold in the EU country you are

in, please call the local Sony Ericsson Call Centre. Please observe that certain services may not be possible elsewhere than in the country of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other EU countries. It may not be possible to repair SIM-locked Products.

\*\* In some countries/regions additional information is requested. If so, this is clearly shown on the valid proof of purchase.

## FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



# Health and safety information

- › This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid. A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out – this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson. Minor variations in display brightness and colour may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and cannot be adjusted. Two defective pixels are deemed acceptable. Minor variations in camera image appearance may occur between phones. This is nothing uncommon and is not regarded as a defective camera module.
- › Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
- › This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.
- › The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.
- › Tampering with any of the seals on the Product will void the warranty.
- › THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY.

# Start the discovery

From  you can...

Watch music videos, goals,  
play games and much more.

Press once and wait for a few seconds for Planet 3. It's free to browse. You'll be advised of any costs before downloading.



## Music

Download full length music videos and tracks.



## Tunes & Pix

Customise your mobile to look and sound unlike anyone else's.




## Games

Buy a game and keep it forever or rent one and pay less.



## Football

 
Get the latest news, match reports, live scores and video clips.

All this plus news, showbiz, movie trailers, TV clips, comedy and more through the .

# Explor



# Handy information about your mobile

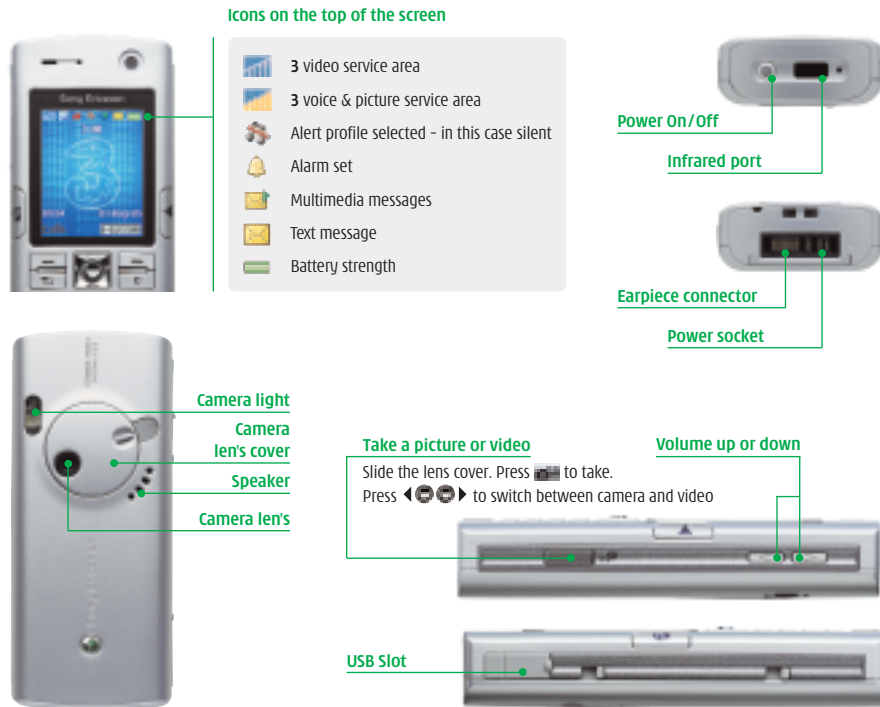

# Health and safety information

## Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of one (1) year.

## What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorised distributors or service partners, in the country/region\* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads or other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from

making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

## Conditions

- › The warranty is valid only if the original proof of purchase issued for this Product to the original purchaser by a Sony Ericsson authorised dealer, specifying the date of purchase and serial number\*\*, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
- › If Sony Ericsson repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.



# Health and safety information

## Declaration of Conformity

We, Sony Ericsson Mobile Communications AB  
of Nya Vattentorget

S-221 88 Lund, Sweden

declare under our sole responsibility that our product

Sony Ericsson type AAD-3021023-BV

and in combination with our accessories, to which  
this declaration relates is in conformity with the  
appropriate standards 3GPP TS 51.010-1, EN 301489-7,  
EN 300328, EN 301489-17 and EN 60950, following  
the provisions of, Radio Equipment and  
Telecommunication Terminal Equipment directive  
99/5/EC with requirements covering EMC directive  
89/336/EEC, and Low Voltage directive 73/23/EEC.

Lund, May 2005



Hiroshi Yoshioka,

Head of Product Business Unit GSM/UMTS

We fulfil the requirements of the R&TTE Directive  
(99/5/EC).

# Text, multimedia and email messaging

- › Press to select text or picture message.

## Sending a text or multimedia message

- › To send a text: write the message › **Continue**  
› **Contacts look up** or **Enter phone no:**  
› enter phone number › **OK** › **Send**.
- › To send a multimedia message (picture msg) to a  
mobile or email address: › **Add** › **Picture** or **Sound**  
or **Video** › select a file › **More** › **Send** › **Enter**  
**phone no** or **Enter email addr:** enter contact  
details › **OK** › **Send**.

## Sending and receiving emails

- › To send an email you first need to set up email on  
your mobile – see page 8.  
 › **Messaging** › **Email** › **Write new** › enter  
your subject › **Continue** › write your message  
› **Continue** › **Enter email addr:** › **OK** › **Send**.
- › To retrieve an email: › **Messaging** › **Email**  
› **Inbox** › **More** › **Send & receive**.
- › To reply to an email: **Reply** (left 'soft key').
- › Browse into Mail: press and select  
 **Go to Services**. Scroll to and press .


From the browser you can send emails and  
view and manage emails, voicemails, faxmails  
and contacts.

## Help with entering text

- › To cycle between lower case, upper case  
and predictive text press .
- › To enter numbers, press the specific key  
for 3 seconds.
- › To insert a symbol, template, emoticon or  
contact number select **More** (right 'soft key').
- › To insert a space press .

# Calling and video calling


## Making calls

- Enter the number.
- Press **Call** for voice calls.
- Press  for video calls.
- End a call press **End call**.



## Receiving calls

- To answer a call press **Answer**.
- To end a call press **End call**.
- During a video call, you'll see a large picture of the other person and a small picture of how you look to them in the bottom right of the screen. Hold the mobile horizontal during video call.



- To stop the other person from seeing you: Press  and scroll to **Stop camera**.
- To hide the picture of you on your mobile: Select **Options** and scroll to **Hide small pic**.

## Setting up Voicemail and Videomail

- To set up Voicemail: press and hold .  
Follow the voice prompts to choose a PIN and record your greeting.
- To set up Videomail, enter 123 and press .  
Follow the voice prompts to record your video greeting. The caller will see your video greeting when you can't answer a video call.

### From you can...

#### View missed, received, dialled calls

##### **Calls (\*)**

#### Activate call waiting

##### **Settings (#) > Calls tab > Manager calls**

#### Divert calls

##### **Settings (#) > Calls tab >**

#### Send or withhold number

##### **Settings (#) > Calls tab > Show or hide no.**

#### View own number

##### **Contacts (8) > Options > My business card**

#### Copy contacts between SIM and mobile

##### **Contacts (8) > Options > Advanced**

#### View contacts on SIM or mobile

##### **Contacts (8) > Options >**

# Health and safety information

A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used.

The talk and standby times depend on the actual transmission conditions when using the mobile phone. If the mobile phone is used near a base station, less power is required and talk and standby times are prolonged.

- Warning! May explode if disposed of in fire.
- Use only Sony Ericsson branded original batteries and chargers intended for use with your mobile phone. Other chargers may not charge sufficiently or may produce excessive heat. Using other batteries and chargers could be dangerous.
- Do not expose the battery to liquid.
- Do not let the metal contacts on the battery touch another metal object. This could short-circuit and damage the battery.
- Do not disassemble or modify the battery.
- Do not expose the battery to extreme temperatures, never above +60°C (+140°F). For maximum battery capacity, use the battery in room temperature.
- Turn off your mobile phone before removing the battery.

- Keep out of children's reach.
- Use the battery for the intended purpose only.
- Do not allow the battery to be put into the mouth. Battery electrolytes may be toxic if swallowed.

## Disposing of the battery

Please check local regulations for disposal of batteries or call your local Sony Ericsson Call Centre for information.

The battery should never be placed in municipal waste. Use a battery disposal facility if available.

## Limited Warranty

Sony Ericsson Mobile Communications AB, S-221 88 Lund, Sweden, (Sony Ericsson), provides this Limited Warranty for your mobile phone and original accessory delivered with your mobile phone (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Centre (national rates may apply) or visit [www.SonyEricsson.com](http://www.SonyEricsson.com) to get further information.





# Health and safety information

For other medical devices, please consult the manufacturer of the device.

## CHILDREN

DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BE DETACHED AND CREATE A CHOKING HAZARD.

## Disposal of old electrical & electronic equipment

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



## Power supply

Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug. If the plug will not fit into the outlet, have a proper outlet installed by a qualified electrician.

## Emergency calls

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible on all cellular networks or when certain network services and/or mobile phone features are in use. Check with your local service provider.

## Battery use and care

We recommend that you fully charge the battery before you use your mobile phone for the first time. The battery can only be charged in temperatures between +5°C (+41°F) and +45°C (+113°F).

# Using camera, video and audio

## Taking and sending photos and video clips

- › Press for 3 seconds. Slide the lens cover at the back of your mobile to activate the camera.
- › Press to select **camera** or **video recorder**.
- › Press on the right side of your mobile to take a photo or to start and stop video recording. Press again to save the video.
- › Select **Send** (left 'soft key') and follow menu.  
You can control light, brightness, quality, file size and duration. In **Camera** or **Video camera** mode select **Settings** (left 'soft key').

## Add a photo to your contact

You can associate a photo with a contact stored on the mobile.

- › Highlight the contact › **More** › **Edit contact** › scroll to and at **Picture** › **Add** (left 'soft key') and follow menu.

## Viewing photos or video clips or audio files

- › › **File manager (7)** › **Pictures** or **Videos** or **Sounds**. Then select your preferred file.

## Recording and sending an audio file

- › To record: › **Voice message** › **Stop**
- › To send an audio file: › **Voice message** › **Stop** › **Send** › **Enter phone no.** or **Enter email addr.** › enter contact details › **OK** › **Send**.

## Playing an audio file

- › To play an audio file: › **File manager (7)** › **Sounds**. Then select your preferred file.

## To select an audio file as a ringtone

- › › **File manager** › **Sounds** › select your preferred file › **More** › **Use as** › **Ringtone**.



# Setting up your email

## Setting up your username

To set up your **3mail** you need to have set up a Voicemail PIN first.

- › Press **Phone** and select **Go to Services**. Scroll to **Phone** and press **Phone**.
- › Scroll to **Enter username** and press **Phone** for the text prompt. Key in your preferred username (eg johnsmith), scroll down to **Done** and press **Phone**. Then press **Phone**.
- › If this name has already been taken you will be asked to choose again. Once your username has been accepted your email address will be johnsmith@3mail.com

## Setting up your profile

- › **Phone** > **Messaging** > **Email** > **Settings** > **Account settings** > **at 3Mail** > **More** > **Edit account**
- › Scroll to **Mailbox** and key in your mobile number starting with 447xx xxx xxx but without plus (+). Scroll down to **Password** and key in the 4-digit PIN you selected for Voicemail. Scroll down to **Email address** and key in your email address (eg johnsmith@3mail.com). Press **Done**.  
You're now ready to send and receive emails from your **3mail** account.

## Collecting emails from other accounts

To collect emails from other accounts you need to set up your POP3 email account.

- › Press **Phone** and select **Go to Services**. Scroll to **Phone** and press **Phone**. Scroll to **Mail** and press **Phone**. Scroll to **Settings** and press **Phone**. Scroll to **Manage other mail** and press **Phone**. At **Add new account** press **Phone**.
- › Scroll to **Name this account**, click **Phone** for the text prompt and enter a name for the account. Then do the same in turn for **POP3 server address**, **POP3 Username**, and **POP3 user password** and select **Done** and press **Phone**.

You can check these details with your email / internet service provider.

You're now ready to collect emails from another email account.

### Help with entering text

- › To cycle between lower case, upper case and predictive text press **Phone**.
- › To enter numbers, press the specific key for 3 seconds.

# Health and safety information

thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below this value.

This is because the mobile phone is designed to use the minimum power required to reach the network.

Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

A separate leaflet with SAR information for this mobile phone model is included with the material that comes with this mobile phone. This information can also be found, together with more information on radio frequency exposure and SAR, on:

[www.SonyEricsson.com](http://www.SonyEricsson.com)

## Driving

Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions. We recommend that you use only Sony Ericsson handsfree solutions intended for use with your product. Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna supports the installation.

Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

## Personal medical devices

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information.



# Getting the most from your mobile

## Set date and time

⌂ > ⚙ Settings (#)

## Select your ringtone


⌂ > ⚙ Settings (#)

> Sound & alerts tab

## Select your wallpaper

⌂ > ⚙ Settings (#) > Display tab >


## Make a video call

Enter the number and press .  
You'll see two live images: the other person and you



## Send text, photo, video, email

Press  for Messages menu


## Back key

Press  once to go back to the previous screen. Press for 5 seconds to return to start screen

## Access Voicemail and Videomail

Press and hold  for voicemail.  
Enter 123 and press  for videomail.  
You can access from abroad by calling +44 7782 333 123

## Navigate

Navigate left, right, up, down.  
Press  to confirm

## Send and receive email

First, you have to set up your email account – see page 8

## Watch music videos and goals, play games and much more

Press and hold  and wait a few seconds for 'Planet 3'. It's free to browse. You'll be advised of any costs before downloading

## Access 'soft boxes'

Press left or right 'soft key' once

## My shorts

Press 


## Clear character

Press  to clear character(s)

## Select alert profile

Press . Press and hold  to put on silent

## Add, find or edit a contact

Press  to find a contact. Press **More** to send or edit contacts

# Health and safety information

**Guidelines for Safe and Efficient Use. Please read this information before using your mobile phone.**

## Recommendations

- > Always treat your product with care and keep it in a clean and dust-free place.
- > Do not expose your product to liquid or moisture or humidity.
- > Do not expose your product to extreme high or low temperatures.
- > Do not expose your product to open flames or lit tobacco products.
- > Do not drop, throw or try to bend your product.
- > Do not paint your product.
- > Do not use your product near medical equipment without requesting permission.
- > Do not use your product when around aircraft, or areas posted "turn off two-way radio".
- > Do not use your product in an area where a potentially explosive atmosphere exists.
- > Do not place your product or install wireless equipment in the area above your car's air bag.
- > Do not attempt to disassemble your product. Only Sony Ericsson authorised personnel should perform service.

## Antenna

Only use an antenna that has been specifically designed by Sony Ericsson for your mobile phone. Use of unauthorised or modified antennas could damage your mobile phone and may violate regulations, causing loss of performance and SAR levels above the recommended limits (see below).

## Efficient use

Hold your mobile phone as you would any other phone. Do not cover the top of the mobile when in use, as this affects call quality and may cause the mobile to operate at a higher power level than needed, thus shortening talk and standby times.

## Radio frequency (RF) exposure and SAR

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).


Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organisations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.) through periodic and

# Transferring files between your mobile and PC

Install the software before you attach your mobile to your PC. You'll need: Windows 2000 Professional or Windows XP Home or Professional; a Pentium II 233MHz (or compatible CPU); at least 128MB of RAM and 20MB of hard disk space; a USB port and CD-ROM drive.

Please note that transferring copyright-protected content, eg music and football videos, without the copyright owner's consent is illegal and will breach the terms of your agreement with 3.


## Installing the file transfer software

- › Close down any open applications on your PC and load the **Sony Ericsson CD** that came with your mobile. The installation should begin automatically, otherwise select  on your PC, **run** and enter **D/E: Setup** and click on **start** and follow the Wizard to install.

## Installing phone drivers


- › Connect your mobile and PC using the USB cable. When the **Found new hardware** menu pops up, follow the Wizard to install the drivers.

## Customise synchronisation settings

- › Click on  > **Program** > **Sony Ericsson** > **Sync Station** > **Settings** > and follow the instructions.



## Making the connection



- › Right click on  **Mobile Phone Monitor** in the bottom right corner of your PC > **Configure**. In the pop up menu click **Setup** and ensure **Always display** icon is selected under the **Phone Monitor taskbar icon**: and click **OK**.




Right click on the  **Sync Manager** and select **Configure**. For **Sync Station**, select **Advance** > **Settings**.

# Transferring files between your mobile and


## Transferring files

- › Right click on  **Sync Station** > **Advance** > **Settings**. Then in the pop up menu tick the box to **Contacts** or **Calendar** and click **OK**.
- › Right click on  **Sync Station** > **Advance** > **Advance Sync**. Please read the different features carefully and then select the appropriate feature for synchronisation.

## Synchronising contacts and calendar

 
- › Double click on  **Mobile Phone Monitor** in the bottom right corner of your PC to start the synchronisation.

or

- › Click on  > **Program** > **Sony Ericsson** > **Sync Station** > **Synchronise**.

- › Click on  **Sony Ericsson File Manager** on your PC > **My Sony Ericsson K608i** > **Phone Memory**.

Drag and drop relevant picture, audio, video between your mobile and PC.

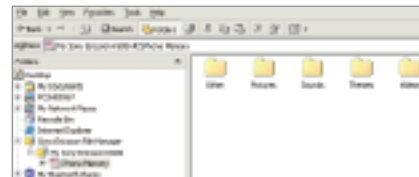

In some cases you'll need to convert files, for example, to view a video on your PC in Windows Media Player that you captured on your mobile, or to listen to an audio file that you transferred to your mobile. You'll find a number of converters to download in the **Customer** section of [three.co.uk](http://three.co.uk)

